



JOGGLE CLEAT

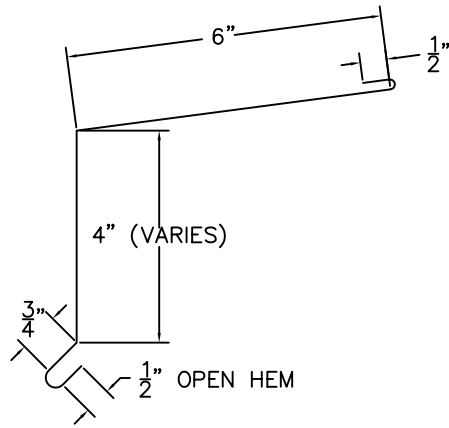


EAVE TRIM



TRIM CLEAT

APPLY 3/8" BEAD OF NON-SKINNING BUTYL SEALANT ON BOTH SIDES AND TOP OF MALE PANEL RIB BEFORE ENGAGING FEMALE RIB OF NEXT PANEL

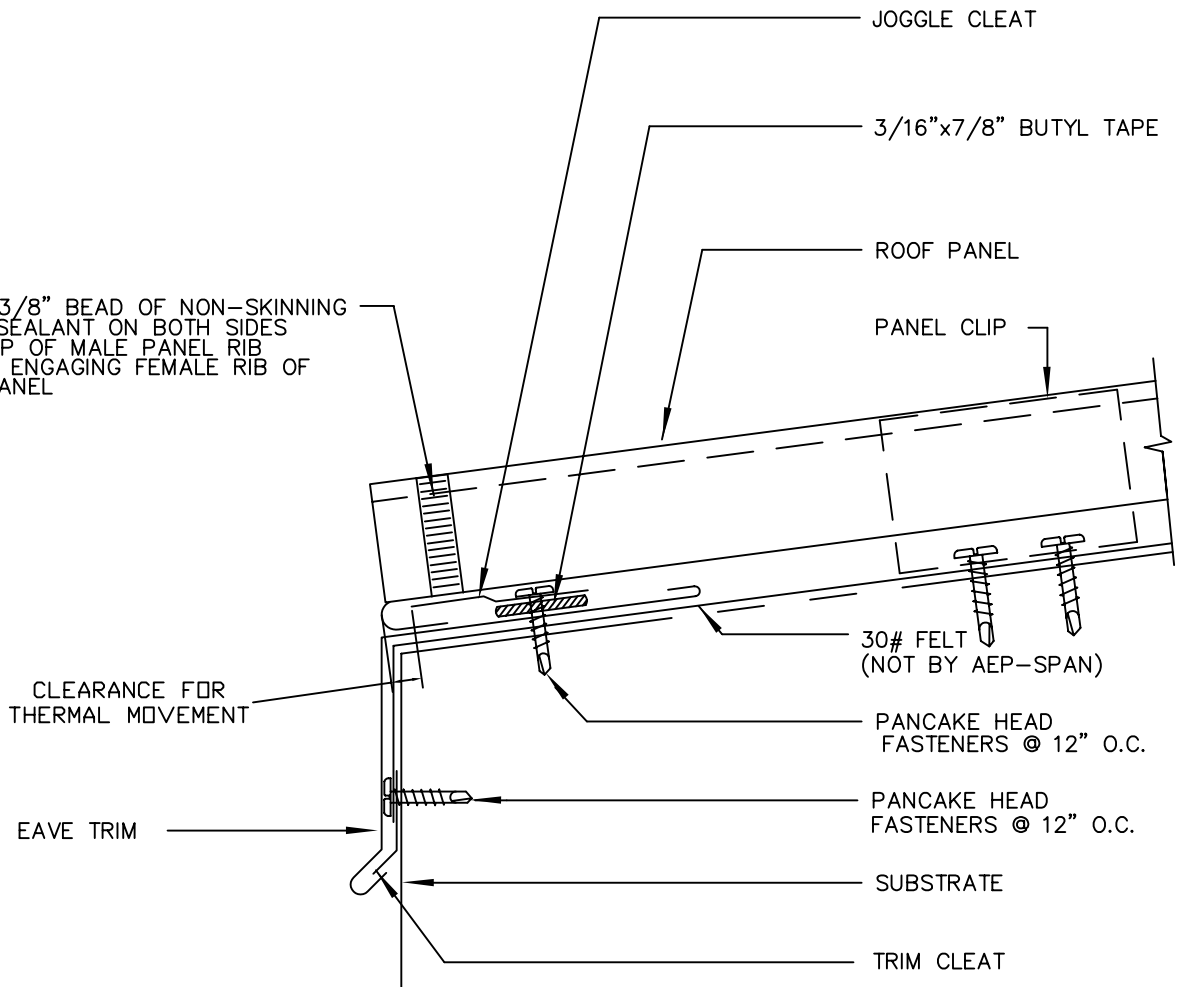

DESIGN SPAN HP & SELECT SEAM

EAVE

DS-01