


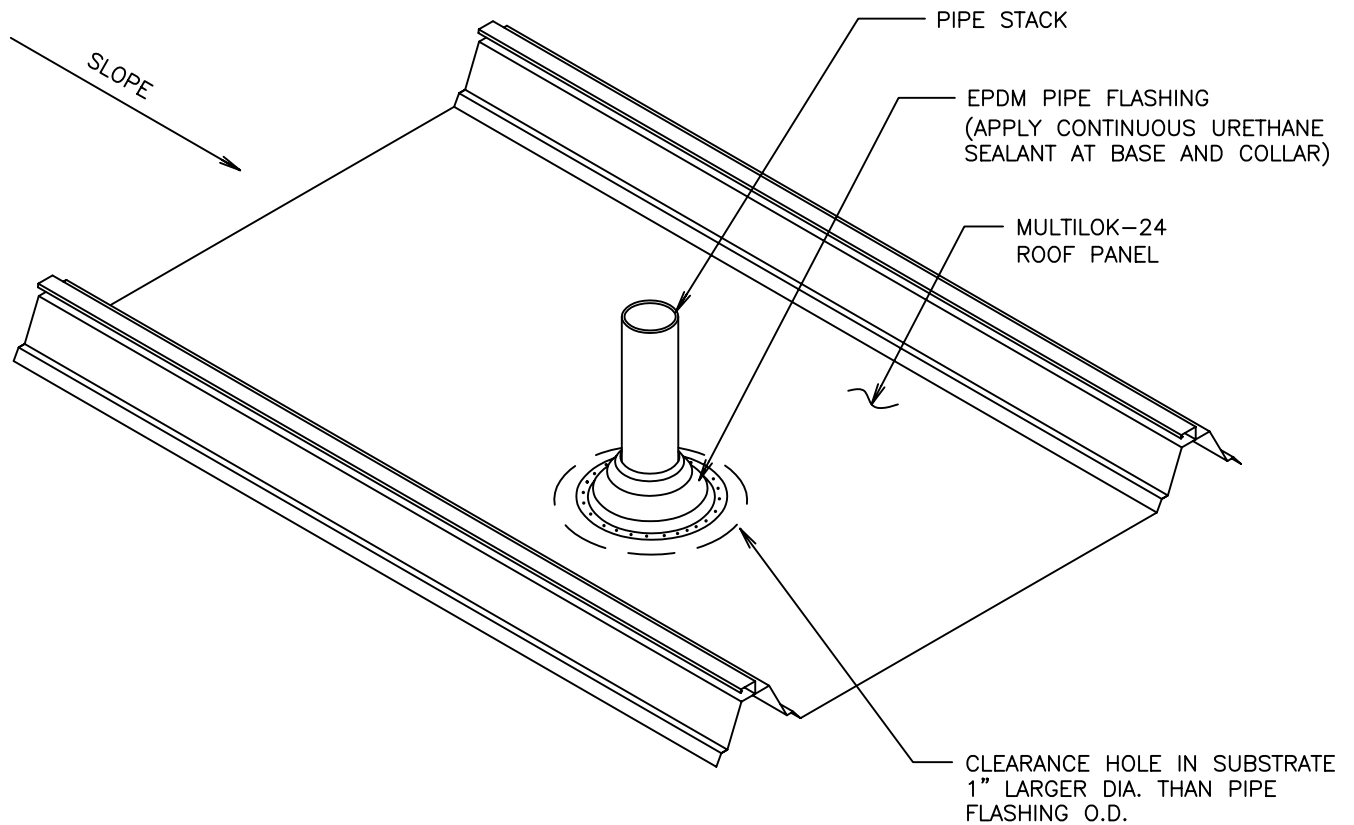

NOTES:

1. DO NOT PIN FASTEN THE EPDM PIPE FLASHING THRU THE PANEL AND INTO THE SUBSTRATE.
2. CUT THE PANEL 2" LARGER IN DIAMETER THAN THE PIPE TO ALLOW FOR PANEL MOVEMENT.
3. ALLOW SUFFICIENT SPACE FOR DRAINAGE AT BOTH SIDES OF ALL ROOF PENETRATIONS.

