




STEP
1

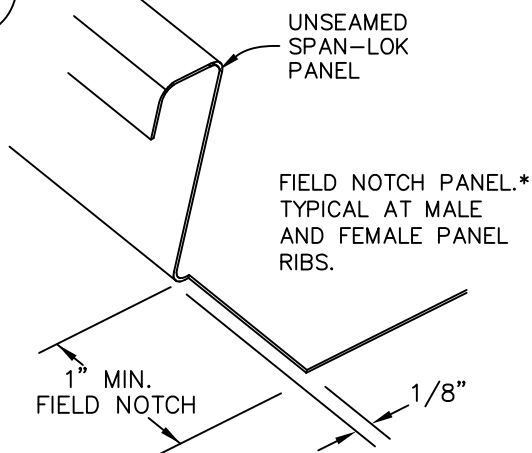

STEP
2

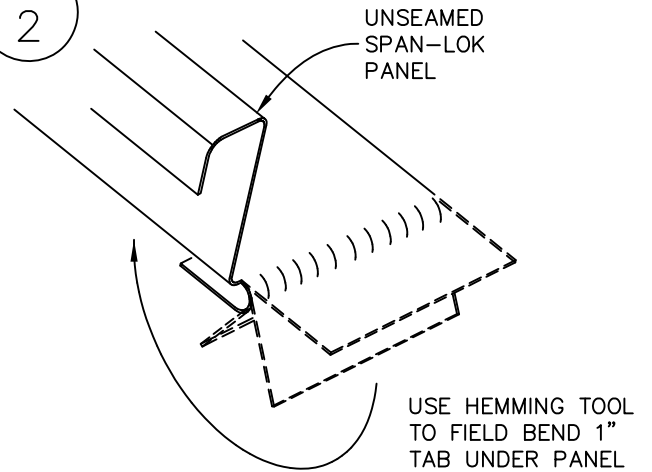

STEP
3

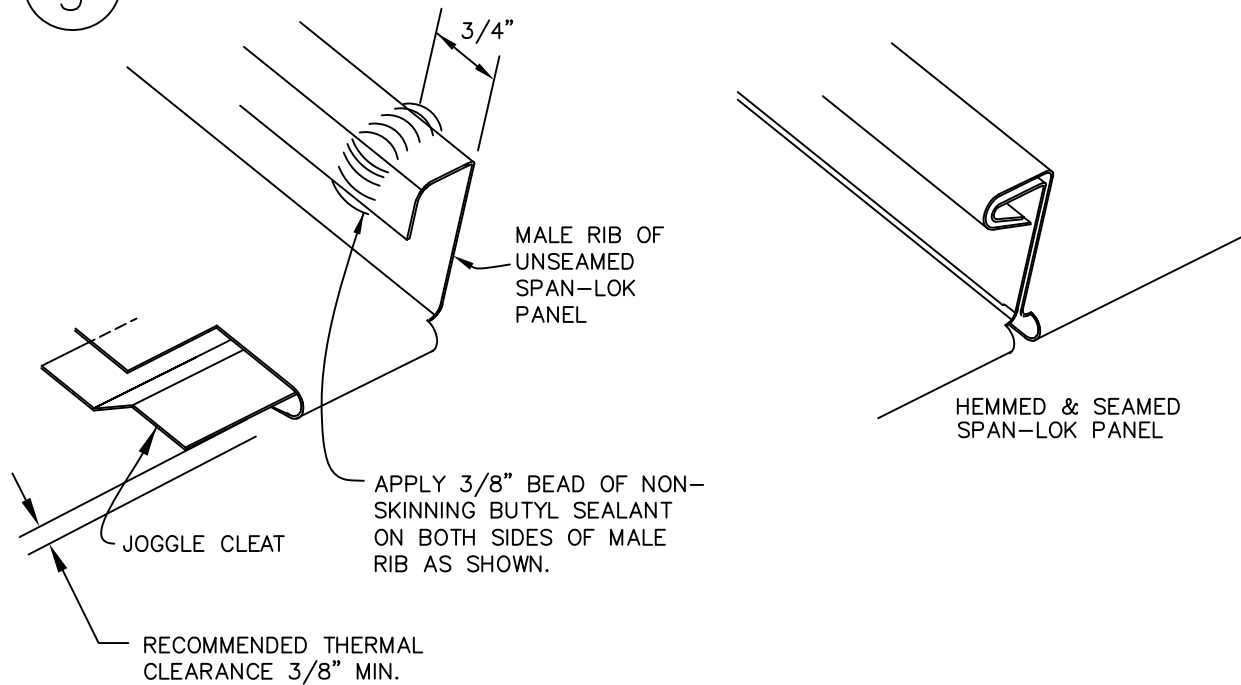

* ASK YOUR AEP SPAN REPRESENTATIVE ABOUT FACTORY NOTCHING.



SPAN-LOK



EAVE HEM

SL-06