



ROOF JACK

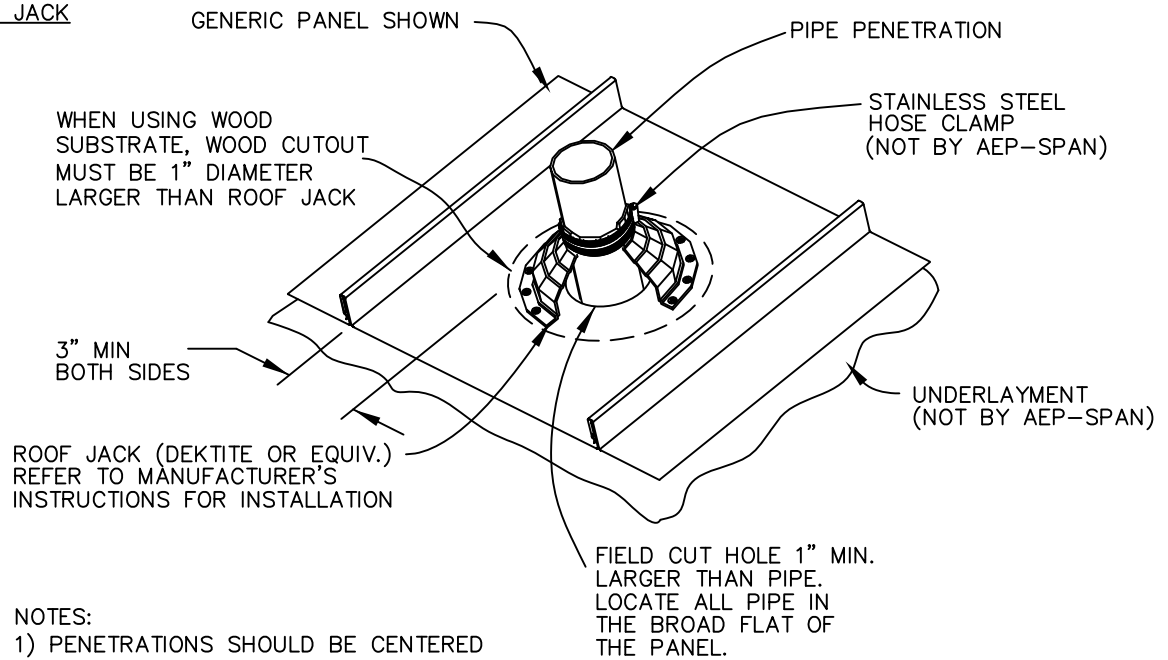

NOTES:

- 1) PENETRATIONS SHOULD BE CENTERED IN PANELS IF AT ALL POSSIBLE
- 2) SUBSTRATE MUST BE CUT OUT ENOUGH SO THAT ROOF JACK IS ONLY ATTACHED TO ROOF PANEL.

ROOF CURB

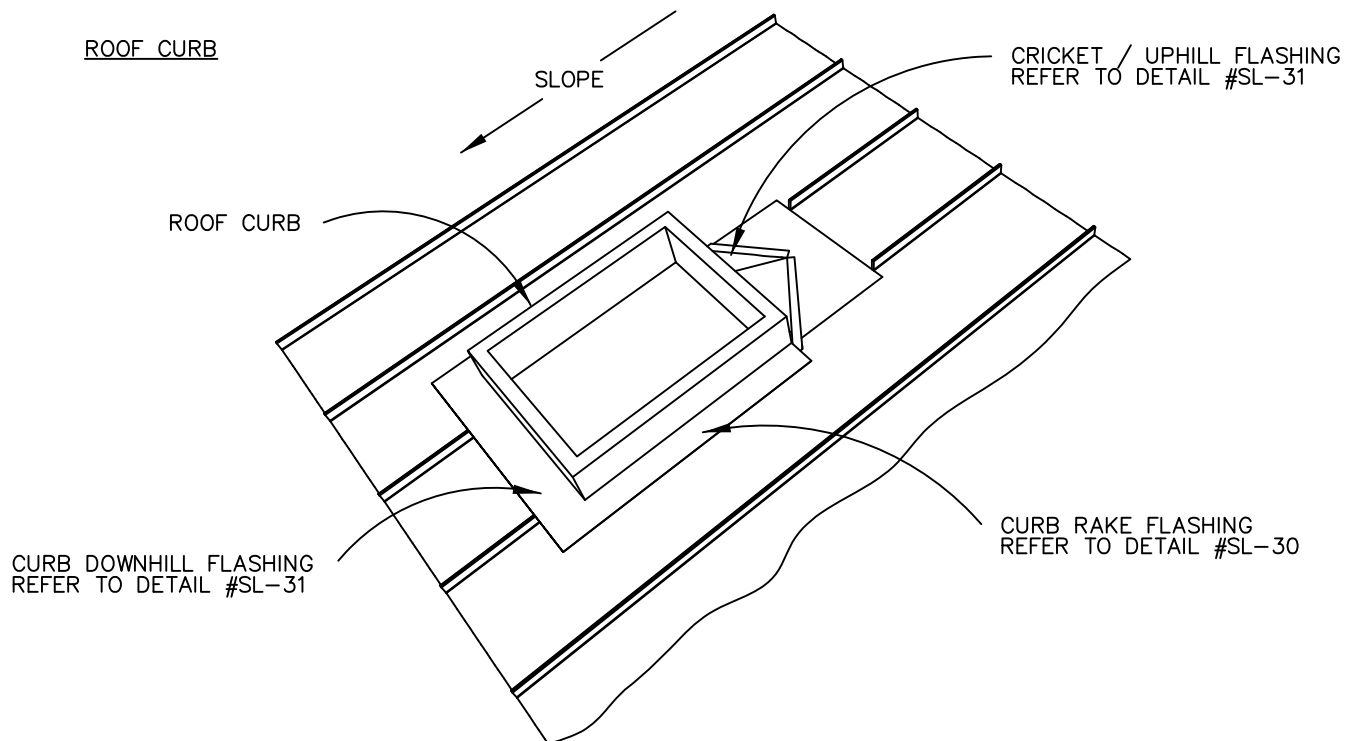

SPAN-LOK

ROOF PENETRATIONS

SL-29