


NOTES:

- 1) PENETRATIONS SHOULD BE CENTERED IN PANELS IF AT ALL POSSIBLE.
- 2) SUBSTRATE MUST BE CUT OUT ENOUGH SO THAT DEKTITE IS ONLY ATTACHED TO ROOF PANEL.

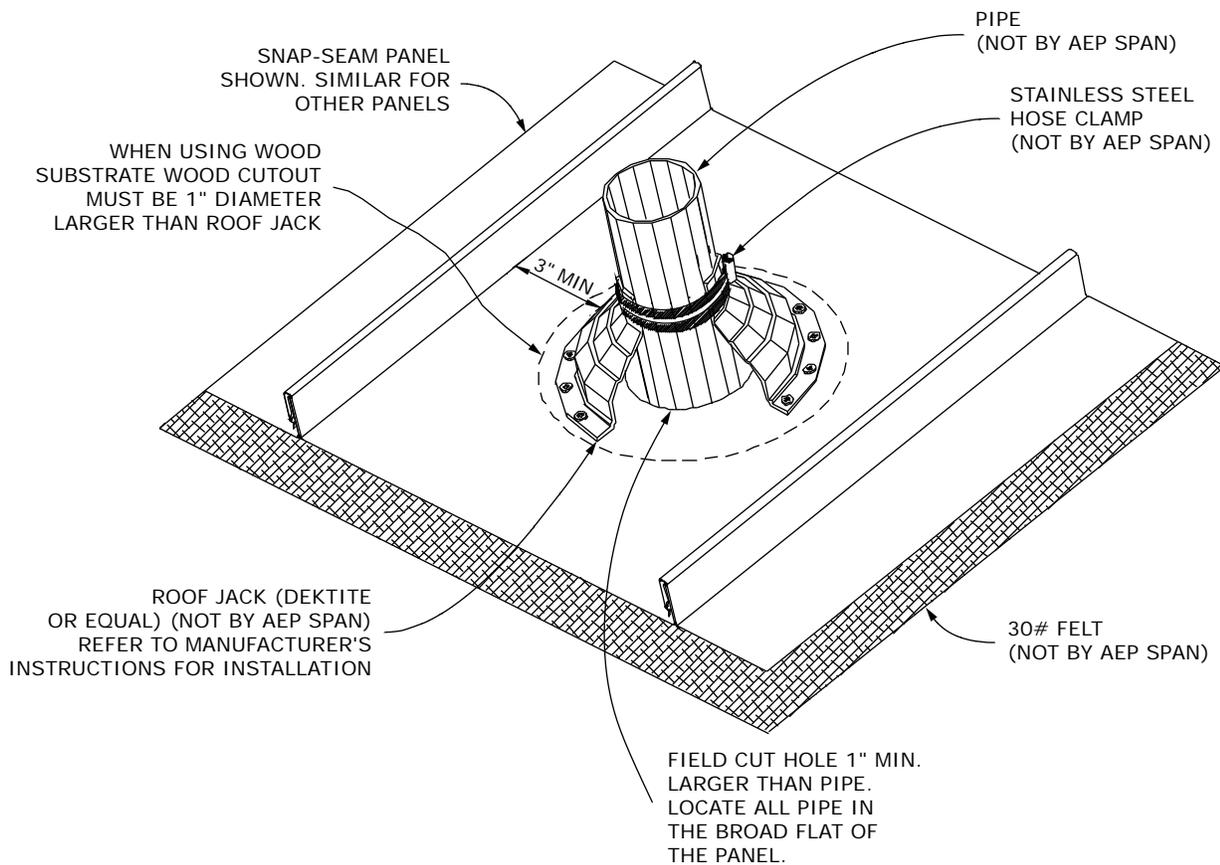

ACCESSORIES

ROOF JACK (DEKTITE)

AC-4